




Installation of the Boss Frog Seatbelt Adapters

These instructions will walk you through replacing your stock seatbelt guide with the new seatbelt adapters. The adapters are made to fit on Boss Frog and Hard Dog rollbars manufactured in 2005 or before. These steps should be repeated for both the driver and passenger sides of the car.

Tools needed: 9/16" and 5/8" wrenches or sockets
portable metal cutoff tool – hacksaw, rotary cutoff, or jigsaw


1. Remove the seatbelt anchor bolt near the floor of the vehicle using a 5/8" wrench.

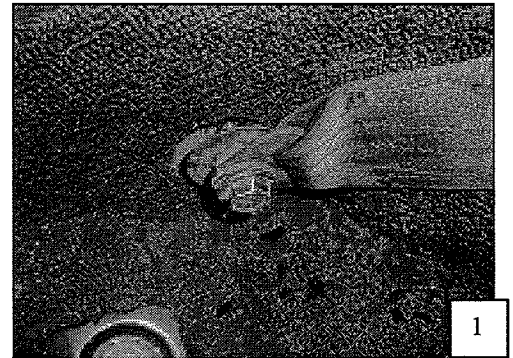

2. The adapter with the red dot is the driver's side, and the adapter with the green dot is the passenger side. With the colored dot facing down, and the adapter's mounting hole towards the rear of the car, insert the anchor end of the seatbelt upward through the slot in the seatbelt adapter (see photo).



3. Slide the adapter up to the male end of the buckle and manipulate the buckle through the adapter's slot. This may require some effort, but the buckle must be able to fit through the slot. If it doesn't fit through, DO NOT proceed further*.

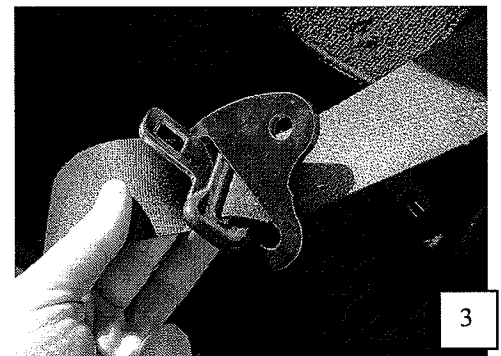


4. Unbolt the stock seatbelt guide from the rollbar tab using a 9/16" wrench.




4

5. Carefully cut through the stock seatbelt guide using a hacksaw, jigsaw, or rotary cutoff tool and remove it from the seatbelt. **Be very careful not to cut, burn, or damage the seatbelt.**

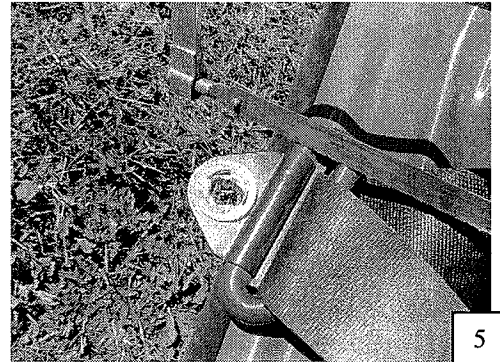

5

6. Install the new seatbelt adapter into place on top of the rollbar tab, in the same position as the stock guide. Use the existing 3/8" grade 8 fasteners originally supplied with the rollbar (bushings are not required). Re-install the plastic bolt cap and flange if desired.
7. Reinstall the seatbelt anchor end using the stock seatbelt anchor bolt.

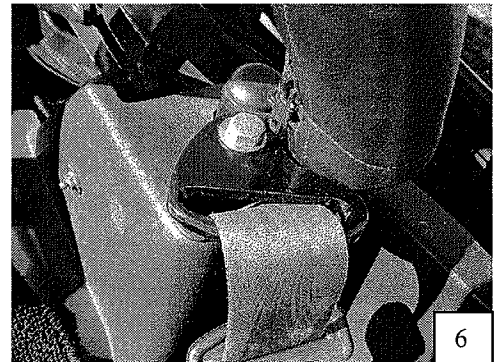

6

Hopefully, your seatbelts will now retract much better. Thanks for buying a Boss Frog!

* Problems? Questions? Contact us at bossfrog@bossfrog.biz or see our website at www.bossfrog.biz.